


LG BASIC

ELECTRONIC COMBINATION LOCK

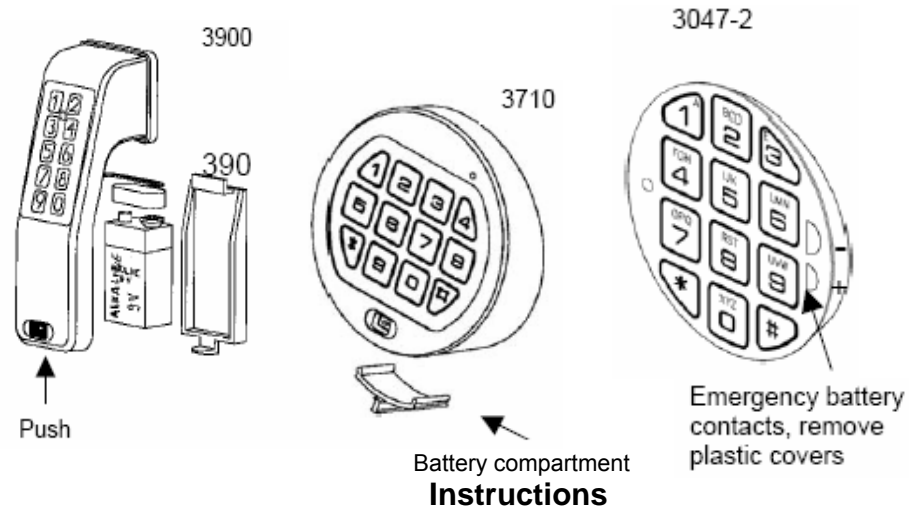

General

The lock operates with a 6-digit code or word of 6 characters. Ability to add a second User combination. Each entry is confirmed by a beep-and-blink signal.

A valid code is followed by a double signal, an invalid code by a triple signal. After an interval of more than 10 seconds, the already entered part of the code is deleted and the entire sequence has to be re-entered.

To open the lock

The manager code is: 1-2-3-4-5-6. Enter the code and (after double signal) the lock is open, turn the grip or knob clockwise. If the lock is not opened within 3 seconds, it is automatically locked again.

To close the lock

Close the door and turn the grip or knob counter-clockwise. The lock will close automatically. Check if it is really closed by turning the grip or knob.

Safety advice

Change the manager code immediately. Do not use personal data (birthday) as a code. Keep the code from unauthorized personal.

редакция 1 от 14.02.07

Instructions "LG BASIC" (3765 v1.00) with entry 3900, 3710 or 3047-2

To change the code: (by open door)

1. Enter 6 x 0 (double signal)
2. Enter valid code (double signal)
3. Enter new code (double signal)
4. Confirm new code (double signal)

If mistakes are made while changing the code (triple signal) the old code remains valid. Test the new code several times by open door!

Add user:

1. Enter manager code and **hold down last digit** until the lock signals two double beeps.
2. Press "1" (double signal)
3. Enter user combination twice (2x double signal)

When the second user code is not accepted (3x signal), it is to equal to the manager code. Select a new code.

Disable user:

1. Enter Manager code and **hold down last digit** of combination until the lock signals with two double beeps
2. Press "2" (single signal)
3. User is temporarily disabled.

Reinstate disabled user:

1. Enter manager code and **hold down last digit** until the lock signals with two double beeps
2. Press "1" (single signal)
3. User is reinstated.

Remove user:

1. Enter manager code and **hold down last digit** of combination until locks signals with two double signals.
2. Press "3" (single signal)
3. User is permanently removed.

Wrong try penalty:

After four invalid codes the entry is blocked for about 5 minutes. During this period the lock signals at 10 seconds intervals. After this time penalty, the entry of every second invalid code initiates a new 5 minutes delay period.

Power supply / Battery change:

When the batteries are running low, the lock will signal for about 3 seconds while being opened. The batteries then have to be changed. Use **ALKALINE** batteries only! The battery compartment is at the bottom of the entry or at the inside of the door. Press battery clip carefully at the battery. 3900: push for instance with a pen in the opening at the bottom to unbolt the battery compartment.